

Philco Radio & Television Corp.

Model: 39-40

Chassis:

Year: Pre August 1939

Power:

Circuit:

IF:

Tubes:

Bands:

Resources


[Riders Volume 10 - PHILCO 10-19](#)

[Riders Volume 10 - PHILCO 10-20](#)

[Riders Volume 10 - PHILCO 10-21](#)

PHILCO RADIO & TELEVISION CORP.

MODEL 39-40
Schematic
Voltage

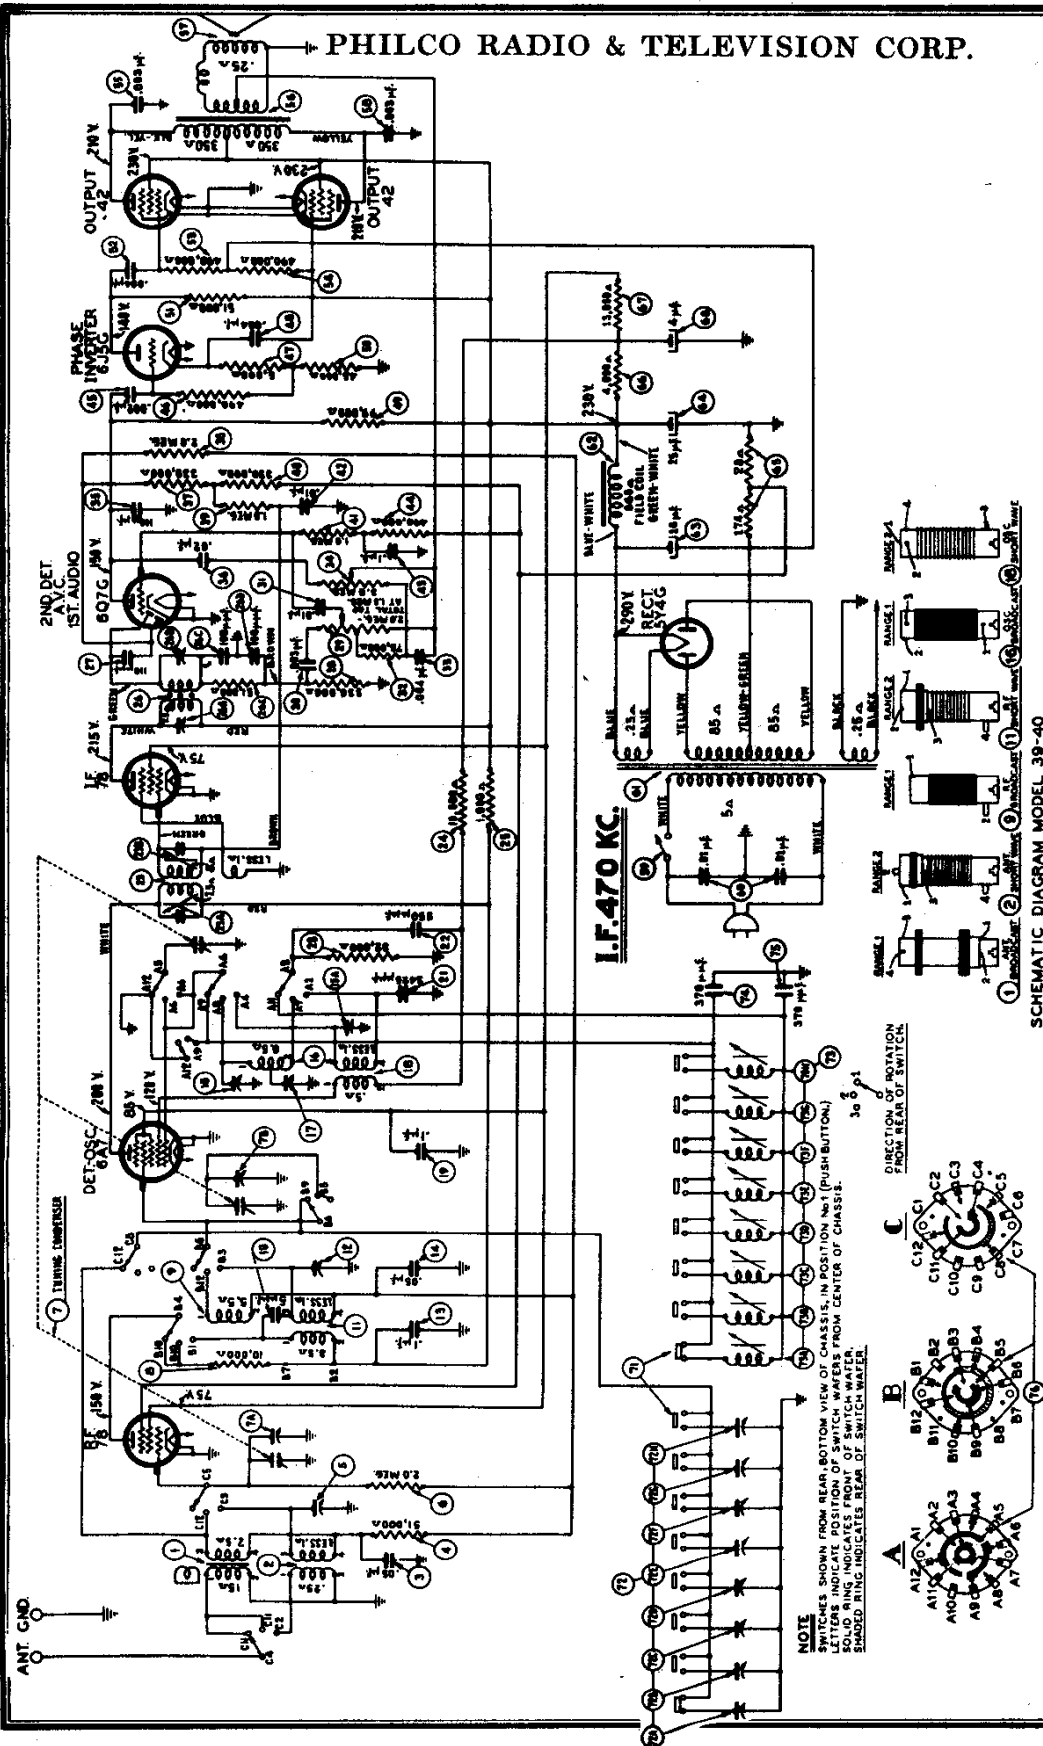

TUNING RANGES: 540 KC. to 1720 KC.; 5.8 MC. to 18.0 MC.

POWER SUPPLY: Voltage, 115 volts. Frequency, 50-60 cycles.
Power consumption, 80 watts.

CABINETS: Type "XX." August, 1938

MODEL 39-40, Code 121
 Socket, Trimmers
 Chassis, Tuner Chassis
 Drive Data, Parts




PHILCO RADIO & TELEV. CORP.

Replacement Parts
 Model 39-40, Code 121

Schem. No.	Description	Part No.	Schem. No.	Description	Part No.
1	Antenna Transformer (Range 1, Bredst.)	32-4056	45	R. C. Resistor (13,000 ohms, 1/2 watt)	33-3318
2	Antenna Transformer (Range 2)	32-4055	46	Resistor (13,000 ohms, 1/2 watt)	33-3319
3	Condenser (.001 mf tubular)	32-4054	47	Elect. Condenser (5 mf, 250)	30-2314
4	Condenser (.001 mf tubular)	32-4053	48	Pilot Lamp	34-2064
5	Condenser (.001 mf tubular)	32-4052	49	Push-Button Switch	43-1462
6	Resistor (2.0 megohms, 1/2 watt)	33-351339	70	Fadder Strip Assem., Complete	31-6259
7	Tuning Condenser	33-320339	71	Compensator No. 1 (540-1030 K.C.)	32-3042
8	Resistor (10,000 ohms, 1/2 watt)	33-32296	72	Compensator No. 2 (540-1030 K.C.)	32-3041
9	R. F. Transformer (Range 1, Bredst.)	33-310339	73	Compensator No. 3 (670-1160 K.C.)	32-3041
10	Condenser (5 mmf mica)	32-2379	74	Compensator No. 4 (900-1470 K.C.)	32-3041
11	R. F. Transformer (Range 2)	30-1083	75	Compensator No. 5 (900-1470 K.C.)	32-3041
12	S. W.	32-3045	76	Compensator No. 6 (900-1470 K.C.)	32-3041
13	Condenser (.01 mf tubular)	30-4455	77	Compensator No. 7 (1100-1600 K.C.)	32-3031
14	Condenser (.05 mf tubular)	30-4519	78	Coil Strip Assembly (8 coils)	32-3042
15	Compensator (two sections)	31-6093	79	Coil No. 1 (540-1030 K.C.)	32-3042
16	Oscillator Transformer (Range 1, Bredst.)	32-2120	80	Coil No. 2 (540-1030 K.C.)	32-3042
17	Compensator	32-2120	81	Coil No. 3 (670-1160 K.C.)	32-3042
18	Oscillator Transformer (Range 2, S. W.)	32-3051	82	Coil No. 4 (670-1160 K.C.)	32-3041
19	Resistor (1.1 mf tubular)	30-4051	83	Coil No. 5 (900-1470 K.C.)	32-3041
20	Resistor (32,000 ohms, 1/2 watt)	33-332339	84	Coil No. 6 (900-1470 K.C.)	32-3041
21	Condenser (3425 mmf mica)	31-6263	85	Coil No. 7 (1100-1600 K.C.)	30-1110
22	Condenser (250 mmf mica)	30-1032	86	Condenser (370 mmf silver mica)	42-1461
23	1st I. F. Transformer Assembly	32-3079	87	Wave Switch	56-1104
24	Resistor (10,000 ohms, 1/2 watt)	33-310339	88	Bezel Gasket	27-9243
25	Resistor (1000 ohms, 1/2 watt)	33-210339	89	Bearing (Drum Shaft)	55-1036
26	2nd I. F. Transformer	32-2582	90	Cable (Power)	1-1410
27	Condenser (100 mmf mica)	30-1031	91	Cap. (Speaker)	1-1410
28	Resistor (100 mmf mica)	30-1031	92	Coupling (Tuning Condenser)	27-4421
29	Volume Control (2.0 mf ohms)	33-5280	93	Dial Clamp	56-1034
30	Volume Control (2.0 mf ohms)	33-5280	94	Dial Gasket	27-9224
31	Condenser (.005 mf tubular)	30-4581	95	Dial Gasket	27-9225
32	Resistor (.01 mf tubular)	33-370339	96	Dial Drive Cord (Tuning)	31-4315
33	Condenser (.004 mf tubular)	33-5287	97	Dial Drive Cord (Speaker)	31-4315
34	Tone Control (5.0 megohms)	33-5287	98	Dial Control (Tuning)	27-4766
35	Condenser (110 mmf mica)	30-1031	99	Disc (Tone Control)	38-9702
36	Resistor (100,000 ohms, 1/2 watt)	33-448139	100	Disc (Volume Control)	27-4765
37	Resistor (2.0 megohms, 1/2 watt)	33-520339	101	Drum Assembly (Tuning Control)	38-9661
38	Resistor (1.0 megohm, 1/2 watt)	33-510339	102	Drum Bracket and Bearing (Tuning Condenser)	38-9662
39	Resistor (330,000 ohms, 1/2 watt)	33-433339	103	Shaft (Control Drums)	28-6924
40	Resistor (1.0 megohm, 1/2 watt)	30-4581	104	Socket Assembly Dial Lamp	38-9694
41	Condenser (.01 mf tubular)	30-4455	105	Socket Assembly Dial Lamp	27-6086
42	Resistor (990,000 ohms, 1/2 watt)	33-449339	106	Socket (6-prong, Octal)	27-6086
43	Resistor (990,000 ohms, 1/2 watt)	33-449339	107	Socket (7-prong, Octal)	27-6053
44	Resistor (990,000 ohms, 1/2 watt)	33-449339	108	Socket (7-prong)	27-6107
45	Resistor (99,000 ohms, 1/2 watt)	33-399339	109	Speaker	36-1450
46	Resistor (45,000 ohms, 1/2 watt)	33-345339	110	Tab Kit	40-6392
47	Resistor (51,000 ohms, 1/2 watt)	33-351339			
48	Condenser (.004 mf tubular)	30-4578			
49	Resistor (490,000 ohms, 1/2 watt)	33-449339			
50	Resistor (490,000 ohms, 1/2 watt)	33-449339			
51	Resistor (490,000 ohms, 1/2 watt)	33-449339			
52	Output Transformer	30-4469			
53	Slide (See Note 39)	32-7981			
54	Slide (See Note 39)	36-4089			
55	Condenser (.003 mf tubular)	30-4469			
56	Condenser (.01 mf to .01 mf balc. file)	42-1467			
57	Pwr. Transfrm., 115 v., 60 cycle	3903DG			
58	Field Coil, Replace Speaker	32-7998			
59	Elect. Condenser (18 mf)	30-2335			
60	Elect. Condenser (25 mf, 250)	30-2333			

Miscellaneous Parts

Grommet (Mfg. Push-Button)	27-4610
Grommet (Mfg. Tuning Unit Assy.)	3914
Grommet (Mfg. Tuning Unit Assy.)	3915
Nut (A. C. Switch)	W-124
Nut (Speaker)	W-1345
Screw (Mfg. Chassis)	W-1834
Screw (Bezel)	W-1834
Washer (Speaker Mfg.)	27-7467
Washer Rubber (Mfg. Chassis)	27-4571
Washer (A. C. Switch)	W-894

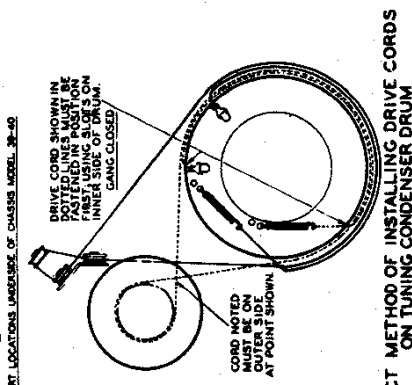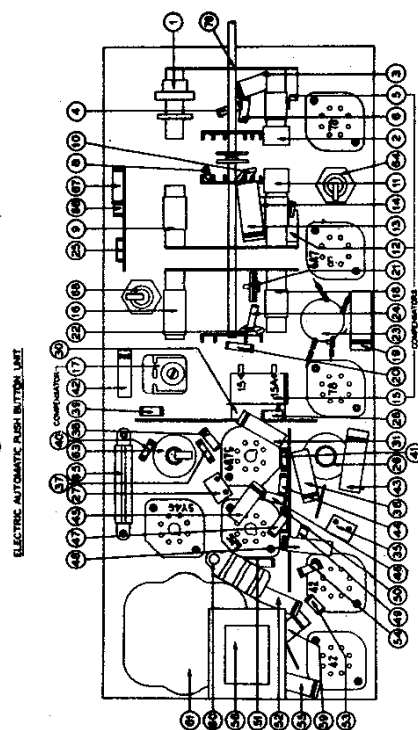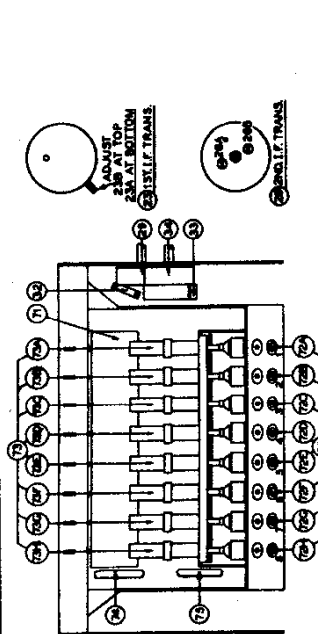

Copyright 1938,
 Philco Radio & Television Corp.
 Phila., Pa.

MODEL 39-40
MODEL 39-45

PHILCO RADIO & TELEVISION CORP.

MODEL 39-36
Tuner Data

Alignment, Tuner Data

ADJUSTING ELECTRIC PUSE-BUTTON TUNING FOR MODELS 39-36, 39-40, AND 39-45

In order to set the Electric Push-Buttons correctly for each station, the procedure as given below should be carefully followed. Accurate adjustment of the buttons requires the use of a Philco Model 077 Station Setter and a part No. 27-7059 insulated screw driver.

(A) Select eight of the most popular stations received in the locality and remove their call letters from the call letter sheets supplied. Place the call letters in the windows above the buttons, making sure that each button covers the frequency of the station for which it is to be used. Two adjustment screws for each button are located on the rear of the push-button unit. Each set of screws is numbered and covers a frequency range as follows:

Push-Button	Frequency Range
1 and 2	540-1030 KC.
3 and 4	670-1160 KC.
5 and 6	900-1470 KC.
7 and 8	1100-1600 KC.

Looking at the front of the cabinet, the first button on the left is adjusted by set screw No. 1, the next button by set screw No. 2, and the remaining buttons in the same order.

(B) Connect the aerial and ground to the "ANT" and "GND" terminals of the receiver.

(C) Turn the receiver Tuning Range Selector to position 2 (Broadcast) and tune the receiver to the station to be set on the first button.

(D) Plug the output leads of the Station Setter into the "High" and "Gnd" jacks, and turn the output controls to maximum.

Turn the modulation control to "Modulation On." Connect the output lead of the station setter to the "ANT" and "GND" terminals of the receiver and tune to the frequency of the station being received. As the indicator is slowly tuned through the frequency of the station, there will be two points at which a whistle will be heard, one above and one below the frequency of the station. When the indicator is on the frequency of the station the whistle will be eliminated and the modulated signal of the station setter will then be clearly heard through the receiver.

(E) Turn the receiver Tuning Range Selector to position 1 (Push-Button) and press in the first button. Using the part No. 27-7059 insulated screw driver; turn the No. 1 "OSC" screw until the broadcast station identified by the station setter signal is tuned to Maximum Volume.

(F) Remove the output lead of the station setter from the "ANT" terminal of the receiver and turn the indicator of the Station Setter off the frequency of the station. The program of the desired station will then be heard in the receiver without the modulated signal.

(G) With the volume of the receiver low, slowly turn the No. 1 "OSC" screw back and forth until maximum output is received. Repeat the same procedure for the No. 1 "ANT" screw.

After setting up the first station, the same procedure given under (C) to (G) is used for the other stations.

ALIGNMENT OF MODEL 39-40

Operations	SIGNAL GENERATOR			RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Setting	Adjust Compensators to Max. Reading	
1	6A7	.1 mf	470 KC.	580 KC.	Vol. Max. Range Switch Broadcast	26B, 26A, 23B, 23A	
2	Ant. Ter.	150 mmf	1550 KC.	1550 KC.	"	15, 7B, 7A	See Note B and C
3	Ant. Ter.	150 mmf	580 KC.	580 KC.	"	17	Roll Tuning Condenser
4	Ant. Ter.	150 mmf	1550 KC.	1550 KC.	"	15	
5	Ant. Ter.	400 ohms	18.0 MC.	18.0 MC.	Range Switch S. W.	15A, 12, 5	

NOTE A—The "Dummy Antenna" consists of a condenser connected in series with the signal generator output lead (high side). Use the capacity as specified in each step of the above procedure.

NOTE B—Dial Calibration. In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To adjust

the dial, proceed as follows: With the tuning condenser closed (maximum capacity), set the dial pointer on the extreme left index line at the low frequency end of the broadcast scale. The arrangement of the drive cable is shown on page 3.

NOTE C—Compensators (7A) and (7B) are located on top of the tuning condenser. Compensator (7A) is the first one from the tuning drum side.

ALIGNMENT OF MODEL 39-45

Operation	SIGNAL GENERATOR			RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Setting	Adjust Compensators to Max. Reading	
1	6A7	.1 mf	470 KC.	470 KC.	Vol. Max. Range Switch Broadcast	30B, 30A, 27B, 27A	
2	Antenna	150 mmf	1550 KC.	1550 KC.	"	21, 8B, 8A	See Note B and C
3	Antenna	150 mmf	580 KC.	580 KC.	"	22	Roll Tuning Condenser
4	Antenna	150 mmf	1550 KC.	1550 KC.	"	21	
5	Antenna	400 ohms	5.0 MC.	5.0 MC.	Range Switch Police	21A	
6	Antenna	400 ohms	18.0 MC.	18.0 MC.	Range Switch S. W.	21B, 14, 4	

NOTE A—The "Dummy Antenna" consists of a condenser connected in series with the signal generator output lead (high side). Use the capacity as specified in each step of the above procedure.

NOTE B—Dial Calibration: In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning condenser closed (maximum

capacity), set the dial pointer on the extreme left index line at the low frequency end of the broadcast scale. The arrangement of the drive cable is shown on page 3.

NOTE C—Compensators (8A) and (8B) are located on top of the tuning condenser. Compensator (8A) is the first one from the tuning drum side.